




Generators Génératrices Generadores Geradores

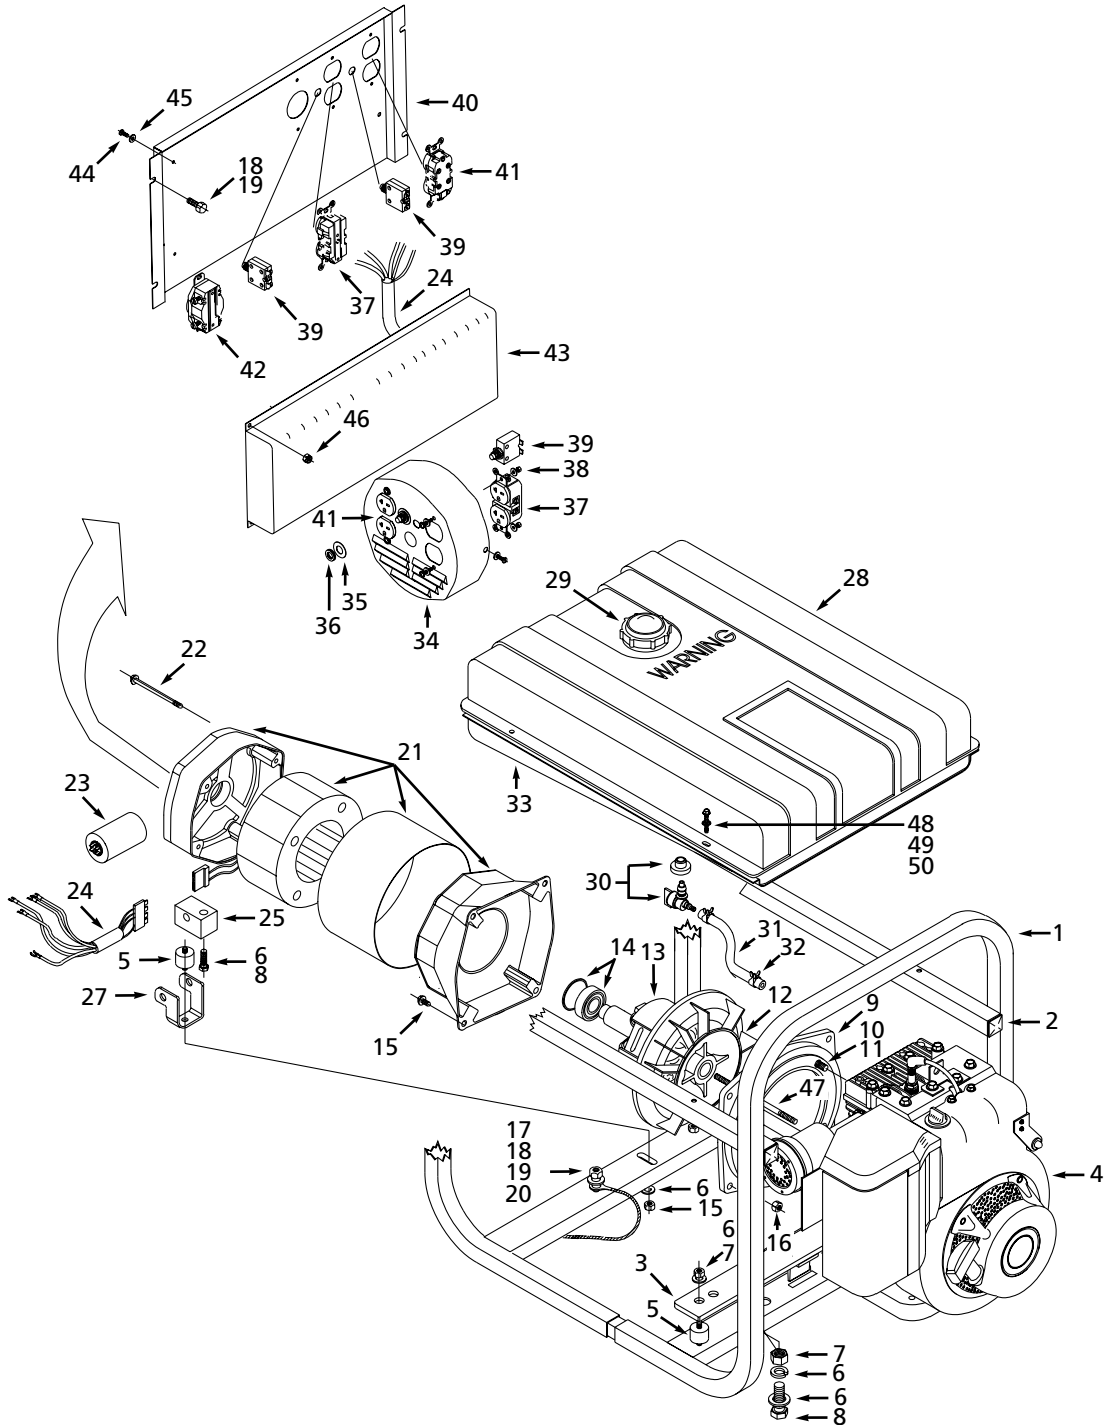

Replacement Parts List		GN501200AC					
Ref.	Description	GN451100AC	GN501100AN	GN551100AC	GN552100AN	GN602100AC	Qty.
1	Carry frame with box	GN004002SV	GN004002SV	GN004002SV	GN004005SV	GN004005SV	1
2	1" Square cap plug	ST166200AV	ST166200AV	ST166200AV	ST166200AV	ST166200AV	4
3	Mounting plate	GN004203AV	GN004203AV	GN004203AV	GN004203AV	GN004203AV	1
4	8 HP Gasoline engine	NG002700AV	—	—	—	—	1
	10 HP Gasoline engine	—	NG002800AV	NG002800AV	—	—	1
	11 HP Gasoline engine	—	—	—	NG002801AV	NG002801AV	1
5	Vibration isolator (Set of 3)	GN004401SV	GN004401SV	GN004401SV	GN004401SV	GN004401SV	1
6	5/16 Flatwasher	*	*	*	*	*	10
7	5/16-18 Self lock nut	*	*	*	*	*	8
8	5/16-18 x 1 1/4" Hex screw	*	*	*	*	*	3
9	Adapter plate	GN001801SV	GN001801SV	GN001801SV	GN001801SV	GN001801SV	1
10	3/8-16 x 3/4" Hex screw	*	*	*	*	*	4
11	3/8" Lockwasher	*	*	*	*	*	4
12	Fan	GN001820SV	GN001820SV	GN001820SV	GN001820SV	GN001820SV	1
13	Diode and suppressor kit (2 ea)	GN001848SV	GN001848SV	GN001848SV	GN001848SV	GN001848SV	1
14	O.D.E. Bearing and O-ring	GN001851SV	GN001851SV	GN001851SV	GN001851SV	GN001851SV	1
15	5/16-18 x 3/4" Bolt	*	*	*	*	*	5
16	5/16-18 Nut	*	*	*	*	*	4
17	Lead wires & ground kit	GN003801SV	GN003801SV	GN003801SV	GN003802SV	GN003802SV	1
18	1/4-3/8 Self tapping screw	*	*	*	*	*	5
19	1/4" Flatwasher	*	*	*	*	*	5
20	1/4" Star ext. washer	*	*	*	*	*	1
21	Generator assembly	GN001800AV	GN001800AV	GN002000AV	GN002000AV	GN002000AV	1
22	Stator bolt kit	GN001838SV	GN001838SV	GN002038SV	GN002038SV	GN002038SV	1
23	Capacitor kit	GN001846SV	GN001846SV	GN002046SV	GN002046SV	GN002046SV	1
24	Generator cable	GN005700AV	GN005700AV	GN005700AV	GN005701AV	GN005701AV	1
25	Mounting spacer	GN004602AV	GN004602AV	GN004602AV	GN004602AV	GN004602AV	1
27	Stablizer bracket	GN001101AV	GN001101AV	GN001101AV	GN001101AV	GN001101AV	1
28	Fuel tank	GN004800AV	GN004800AV	GN004800AV	GN004800AV	GN004800AV	1
29	Fuel tank cap	ST165700AV	ST165700AV	ST165700AV	ST165700AV	ST165700AV	1
30	Fuel valve kit	GN005201SV	GN005201SV	GN005201SV	GN005201SV	GN005201SV	1
31	Fuel line	GN005401SV	GN005401SV	GN005401SV	GN005401SV	GN005401SV	1
32	Fuel line clamp	PP012801AV	PP012801AV	PP012801AV	PP012801AV	PP012801AV	2
33	Tank shield	GN005000AV	GN005000AV	GN005000AV	GN005000AV	GN005000AV	1
34	Receptacle box w/ screws	GN001832SV	GN001832SV	GN001832SV	GN001833SV	GN001833SV	1
35	#8 Flatwasher	*	*	*	*	*	8
36	#8-32 x 3/4" Pan head screw	*	*	*	*	*	4
37	240 Volt, 20 Amp Receptacle	GN003500AV	GN003500AV	GN003500AV	GN003500AV	GN003500AV	1
38	#8-32 Hex nut	*	*	*	*	*	4
39	240 V, 25 Amp Circuit breaker	GN003601AV	GN003601AV	GN003601AV	GN003601AV	GN003601AV	2
40	Control panel	—	—	—	GN005602AV	GN005602AV	1
41	120 Volt 15 amp receptacle	GN003400AV	GN003400AV	GN003400AV	GN003400AV	GN003400AV	1
42	120/240 Volt 20 Amp Twist lock	—	—	—	GN003501AV	GN003501AV	1
43	Control panel cover	—	—	—	GN005800AV	GN005800AV	1
44	#10-32 x 2" Hex screw	—	—	—	*	—	4
45	#10 Flatwasher	—	—	—	*	—	4
46	#10-32 Self lock nut	—	—	—	*	—	4
47	Rotor through bolt kit	GN001834SV	GN001834SV	GN002034SV	GN002034SV	GN002034SV	1
48	#10-32 Self-tapping screw	HP007117AV	HP007117AV	HP007117AV	HP007117AV	HP007117AV	4
49	#10 Flatwasher W series	*	*	*	*	*	4
50	#10 Nylon washer	GN001210AV	GN001210AV	GN001210AV	GN001210AV	GN001210AV	4

* Standard hardware item, available locally

Liste De Pièces De Rechange		GN501200AC					
Ref.	Description	GN451100AC	GN501100AN	GN551100AC	GN552100AN	GN602100AC	Qté.
1	Bâti portatif avec boîte	GN004002SV	GN004002SV	GN004002SV	GN004005SV	GN004005SV	1
2	Bouchon carré 1 po	ST166200AV	ST166200AV	ST166200AV	ST166200AV	ST166200AV	4
3	Plaque de montage	GN004203AV	GN004203AV	GN004203AV	GN004203AV	GN004203AV	1
4	Moteur à essence 8 HP	NG002700AV	—	—	—	—	1
	Moteur à essence 10 HP	—	NG002800AV	NG002800AV	—	—	1
	Moteur à essence 11 HP	—	—	—	NG002801AV	NG002801AV	1
5	Isolateur de vibration (Jeu de 3)	GN004401SV	GN004401SV	GN004401SV	GN004401SV	GN004401SV	1
6	Rondelle plate 5/16 po	*	*	*	*	*	10
7	Écrou Hex indesserrable 5/16-18	*	*	*	*	*	8
8	Vis hex 5/16-18 x 1 1/4" po	*	*	*	*	*	3
9	Plaque adaptatrice	GN001801SV	GN001801SV	GN001801SV	GN001801SV	GN001801SV	1
10	Vis hex 3/8-16 x 3/4 po	*	*	*	*	*	4
11	Rondelle indesserrable 3/8 po	*	*	*	*	*	4
12	Ventilateur	GN001820SV	GN001820SV	GN001820SV	GN001820SV	GN001820SV	1
13	Jeu de diode et supresseur (2 chaque)	GN001848SV	GN001848SV	GN001848SV	GN001848SV	GN001848SV	1
14	Roulement O.D.E. et Joint Torique	GN001851SV	GN001851SV	GN001851SV	GN001851SV	GN001851SV	1
15	Boulon 5/16-18 x 3/4 po	*	*	*	*	*	5
16	Écrou 5/16-18	*	*	*	*	*	4
17	Jeu mis à la terre, fils de traversée	GN003801SV	GN003801SV	GN003801SV	GN003802SV	GN003802SV	1

Liste De Pièces De Rechange (Suite)

		GN501200AC					
Ref.	Description	GN451100AC	GN501100AN	GN551100AC	GN552100AN	GN602100AC	Qté.
18	Vis autoforeuse 1/4-3/8 po	*	*	*	*	*	5
19	Rondelle plate 1/4 po	*	*	*	*	*	5
20	Rondelle 1/4 po	*	*	*	*	*	1
21	Assem. de Génératrice	GN001800AV	GN001800AV	GN002000AV	GN002000AV	GN002000AV	1
22	Nécessaire de boulon de stator	GN001838SV	GN001838SV	GN002038SV	GN002038SV	GN002038SV	1
23	Nécessaire de condensateur	GN001846SV	GN001846SV	GN002046SV	GN002046SV	GN002046SV	1
24	Câble de génératrice	GN005700AV	GN005700AV	GN005700AV	GN005701AV	GN005701AV	1
25	Entretoise de fixation	GN004602AV	GN004602AV	GN004602AV	GN004602AV	GN004602AV	1
27	Support stabilisateur	GN001101AV	GN001101AV	GN001101AV	GN001101AV	GN001101AV	1
28	Réservoir d'essence	GN004800AV	GN004800AV	GN004800AV	GN004800AV	GN004800AV	1
29	Bouchon de réservoir d'essence	ST165700AV	ST165700AV	ST165700AV	ST165700AV	ST165700AV	1
30	Jeu de soupape d'essence	GN005201SV	GN005201SV	GN005201SV	GN005201SV	GN005201SV	1
31	Canalisation d'essence	GN005401SV	GN005401SV	GN005401SV	GN005401SV	GN005401SV	1
32	Collier de canalisation d'essence	PP012801AV	PP012801AV	PP012801AV	PP012801AV	PP012801AV	2
33	Écran protecteur de réservoir	GN005000AV	GN005000AV	GN005000AV	GN005000AV	GN005000AV	1
34	Boîte de prise avec vis	GN001832SV	GN001832SV	GN001832SV	GN001833SV	GN001833SV	1
35	Rondelle plate #8	*	*	*	*	*	8
36	Vis #8-32 x 3/4 po	*	*	*	*	*	4
37	Prise de courant 240 Volt, 20 Amp	GN003500AV	GN003500AV	GN003500AV	GN003500AV	GN003500AV	1
38	Écrou Hex #8-32	*	*	*	*	*	4
39	Disjoncteur 240V, 25 Amp	GN003601AV	GN003601AV	GN003601AV	GN003601AV	GN003601AV	2
40	Panneau de commande	—	—	—	GN005602AV	GN005602AV	1
41	Prise de courant 120 V, 15 Amp	GN003400AV	GN003400AV	GN003400AV	GN003400AV	GN003400AV	1
42	Serrage à torsion 120/240 Volt 20 A	—	—	—	GN003501AV	GN003501AV	1
43	Control panel cover	—	—	—	GN005800AV	GN005800AV	1
44	Vis hex #10-32 x 2 po	—	—	—	*	—	4
45	Rondelle plate #10	—	—	—	*	—	4
46	Écrou indesserrable #10-32	—	—	—	*	—	4
47	Jeu de boulon traversant du rotor	GN001834SV	GN001834SV	GN002034SV	GN002034SV	GN002034SV	1
48	Vis autoforeuse #10-32	HP007117AV	HP007117AV	HP007117AV	HP007117AV	HP007117AV	4
49	Rondelle plate #10 W serie	*	*	*	*	*	4
50	Rondelle de nylon #10	GN001210AV	GN001210AV	GN001210AV	GN001210AV	GN001210AV	4

* Article de quincaillerie standard, disponible dans le quartier

Lista De Repuestos

		GN501200AC					
Ref.	Descripción	GN451100AC	GN501100AN	GN551100AC	GN552100AN	GN602100AC	Ctd.
1	Montaje	GN004002SV	GN004002SV	GN004002SV	GN004005SV	GN004005SV	1
2	Tapón cuadrado de 1"	ST166200AV	ST166200AV	ST166200AV	ST166200AV	ST166200AV	4
3	Base	GN004203AV	GN004203AV	GN004203AV	GN004203AV	GN004203AV	1
4	Motor de gasolina de 8 HP	NG002700AV	—	—	—	—	1
	Motor de gasolina de 10 HP	—	NG002800AV	NG002800AV	—	—	1
	Motor de gasolina de 11 HP	—	—	—	NG002801AV	NG002801AV	1
5	Aislante de vibración (Juego de 3)	GN004401SV	GN004401SV	GN004401SV	GN004401SV	GN004401SV	1
6	Arandela 5/16"	*	*	*	*	*	10
7	Tuerca de seguridad 5/16-18	*	*	*	*	*	8
8	Tornillo Hex de 5/16-18 x 1 1/4"	*	*	*	*	*	3
9	Adaptador	GN001801SV	GN001801SV	GN001801SV	GN001801SV	GN001801SV	1
10	Tornillo Hex de 3/8-16 x 3/4"	*	*	*	*	*	4
11	Arandela de 3/8"	*	*	*	*	*	4
12	Ventilador	GN001820SV	GN001820SV	GN001820SV	GN001820SV	GN001820SV	1
13	Juego de diodos y supresores (2 cu)	GN001848SV	GN001848SV	GN001848SV	GN001848SV	GN001848SV	1
14	Baleros y anillo en O	GN001851SV	GN001851SV	GN001851SV	GN001851SV	GN001851SV	1
15	Perno de 5/16-18 x 3/4"	*	*	*	*	*	5
16	Tuerca de 5/16-18	*	*	*	*	*	4
17	Cables y conexiones a tierra	GN003801SV	GN003801SV	GN003801SV	GN003802SV	GN003802SV	1
18	Tornillo autorroscante de 1/4-3/8"	*	*	*	*	*	5
19	Arandela 1/4"	*	*	*	*	*	5
20	Arandela estrellada externa de 1/4"	*	*	*	*	*	1
21	Generador	GN001800AV	GN001800AV	GN002000AV	GN002000AV	GN002000AV	1
22	Juego de pernos del estator	GN001838SV	GN001838SV	GN002038SV	GN002038SV	GN002038SV	1
23	Juego de piezas del capacitador	GN001846SV	GN001846SV	GN002046SV	GN002046SV	GN002046SV	1
24	Cable del generador	GN005700AV	GN005700AV	GN005700AV	GN005701AV	GN005701AV	1
25	Separador de la base	GN004602AV	GN004602AV	GN004602AV	GN004602AV	GN004602AV	1
27	Abrazadera estabilizadora	GN001101AV	GN001101AV	GN001101AV	GN001101AV	GN001101AV	1
28	Tanque del combustible	GN004800AV	GN004800AV	GN004800AV	GN004800AV	GN004800AV	1
29	Tapa del tanque de combustible	ST165700AV	ST165700AV	ST165700AV	ST165700AV	ST165700AV	1
30	Juego de válvulas del combustible	GN005201SV	GN005201SV	GN005201SV	GN005201SV	GN005201SV	1
31	Línea del combustible	GN005401SV	GN005401SV	GN005401SV	GN005401SV	GN005401SV	1
32	Juego de válvulas del combustible	PP012801AV	PP012801AV	PP012801AV	PP012801AV	PP012801AV	2
33	Cubierta del tanque	GN005000AV	GN005000AV	GN005000AV	GN005000AV	GN005000AV	1
34	Tomacorrientes y tornillos	GN001832SV	GN001832SV	GN001832SV	GN001833SV	GN001833SV	1
35	Arandela #8	*	*	*	*	*	8

Lista De Repuestos (Continuación)		GN501200AC					
Ref.	Descripción	GN451100AC	GN501100AN	GN551100AC	GN552100AN	GN602100AC	Ctd.
36	Tornillo de #8-32 x 3/4"	*	*	*	*	*	4
37	Tomacorrientes de 240 Volt, 20 Amp	GN003500AV	GN003500AV	GN003500AV	GN003500AV	GN003500AV	1
38	Tuerca Hex #8-32	*	*	*	*	*	4
39	Cortacircuitos de 240 V, 25 Amp	GN003601AV	GN003601AV	GN003601AV	GN003601AV	GN003601AV	2
40	Tablero de controles	—	—	—	GN005602AV	GN005602AV	1
41	Tomacorrientes de 120 Volt 15 amp	GN003400AV	GN003400AV	GN003400AV	GN003400AV	GN003400AV	1
42	Tapa del tomacorrientes de 120/240 voltios, 20 amperios	—	—	—	GN003501AV	GN003501AV	1
43	Tapa del tablero de controles	—	—	—	GN005800AV	GN005800AV	1
44	Tornillo Hex de #10-32 x 2"	—	—	—	*	—	4
45	Arandela #10	—	—	—	*	—	4
46	Tuerca de seguridad #10-32	—	—	—	*	—	4
47	Pernos para el rotor	GN001834SV	GN001834SV	GN002034SV	GN002034SV	GN002034SV	1
48	Tornillo autorroscante de #10-32	HP007117AV	HP007117AV	HP007117AV	HP007117AV	HP007117AV	4
49	Arandela #10 W serie	*	*	*	*	*	4
50	Arandela de nylon #10	GN001210AV	GN001210AV	GN001210AV	GN001210AV	GN001210AV	4

* Esto lo puede comprar en cualquier ferretería

Lista De Peças De Reposição		GN501200AC					
Ref.	Descrição	GN451100AC	GN501100AN	GN551100AC	GN552100AN	GN602100AC	Qua.
1	Armação com caixa	GN004002SV	GN004002SV	GN004002SV	GN004005SV	GN004005SV	1
2	Plugue de tampa quadrada de 1"	ST166200AV	ST166200AV	ST166200AV	ST166200AV	ST166200AV	4
3	Placa de montagem	GN004203AV	GN004203AV	GN004203AV	GN004203AV	GN004203AV	1
4	Motor a gasolina de 8 HP	NG002700AV	—	—	—	—	1
	Motor a gasolina de 10 HP	—	NG002800AV	NG002800AV	—	—	1
	Motor a gasolina de 11 HP	—	—	—	NG002801AV	NG002801AV	1
5	Isolador de vibração (conjunto de 3)	GN004401SV	GN004401SV	GN004401SV	GN004401SV	GN004401SV	1
6	Arruela plana de 5/16"	*	*	*	*	*	10
7	Porca de seburança de 5/16-18	*	*	*	*	*	8
8	Parafuso sextavado de 5/16-18 x 1 1/4"	*	*	*	*	*	3
9	Placa do adaptador	GN001801SV	GN001801SV	GN001801SV	GN001801SV	GN001801SV	1
10	Parafuso sextavado de 3/8-16 x 3/4"	*	*	*	*	*	4
11	Arruela de segurança de 3/8"	*	*	*	*	*	4
12	Ventilador	GN001820SV	GN001820SV	GN001820SV	GN001820SV	GN001820SV	1
13	Kit de diodos e supressor (2 cada)	GN001848SV	GN001848SV	GN001848SV	GN001848SV	GN001848SV	1
14	Rolament O.D.E. e anel o	GN001851SV	GN001851SV	GN001851SV	GN001851SV	GN001851SV	1
15	Parafuso de 5/16-18 x 3/4"	*	*	*	*	*	5
16	Porca de 5/16-18	*	*	*	*	*	4
17	Kit de aterramento e fios	GN003801SV	GN003801SV	GN003801SV	GN003802SV	GN003802SV	1
18	Parafuso macho de 1/4-3/8"	*	*	*	*	*	5
19	Arruelas planas de 1/4"	*	*	*	*	*	5
20	Arruela de estrela externa de 1/4"	*	*	*	*	*	1
21	Montagem do gerador	GN001800AV	GN001800AV	GN002000AV	GN002000AV	GN002000AV	1
22	Kit de parafusos do estator	GN001838SV	GN001838SV	GN002038SV	GN002038SV	GN002038SV	1
23	Kit do capacitor	GN001846SV	GN001846SV	GN002046SV	GN002046SV	GN002046SV	1
24	Cabo do gerador	GN005700AV	GN005700AV	GN005700AV	GN005701AV	GN005701AV	1
25	Espaçador da montagem	GN004602AV	GN004602AV	GN004602AV	GN004602AV	GN004602AV	1
27	Suporte do estabilizador	GN001101AV	GN001101AV	GN001101AV	GN001101AV	GN001101AV	1
28	Tanque de combustível	GN004800AV	GN004800AV	GN004800AV	GN004800AV	GN004800AV	1
29	Tampa do tanque de combustível	ST165700AV	ST165700AV	ST165700AV	ST165700AV	ST165700AV	1
30	Kit de válvulas do combustível	GN005201SV	GN005201SV	GN005201SV	GN005201SV	GN005201SV	1
31	Linha de combustível	GN005401SV	GN005401SV	GN005401SV	GN005401SV	GN005401SV	1
32	Grampo da linha de combustível	PP012801AV	PP012801AV	PP012801AV	PP012801AV	PP012801AV	2
33	Protetor do tanque	GN005000AV	GN005000AV	GN005000AV	GN005000AV	GN005000AV	1
34	Caixa da tomada c/parafusos	GN001832SV	GN001832SV	GN001832SV	GN001833SV	GN001833SV	1
35	Arruela plana #8	*	*	*	*	*	8
36	Parafuso de cabeça cilíndrica #8-32 x 3/4"	*	*	*	*	*	4
37	Tomada de 20 amp, 240 Volts	GN003500AV	GN003500AV	GN003500AV	GN003500AV	GN003500AV	1
38	Porca sextavada #8-32	*	*	*	*	*	4
39	Disjuntor de 25 amp, 240 V	GN003601AV	GN003601AV	GN003601AV	GN003601AV	GN003601AV	2
40	Painel de controle	—	—	—	GN005602AV	GN005602AV	1
41	Tomada de 15 amp, 120 volts	GN003400AV	GN003400AV	GN003400AV	GN003400AV	GN003400AV	1
42	Trava espiral de 20 amp, 120/240 volts	—	—	—	GN003501AV	GN003501AV	1
43	Tampa do painel de controle	—	—	—	GN005800AV	GN005800AV	1
44	Parafuso sextavado #10-32 x 2"	—	—	—	*	—	4
45	Arruela plana #10	—	—	—	*	—	4
46	Porca de segurança #10-32	—	—	—	*	—	4
47	Kit de parafusos para o rotor	GN001834SV	GN001834SV	GN002034SV	GN002034SV	GN002034SV	1
48	Parafuso macho #10-32	HP007117AV	HP007117AV	HP007117AV	HP007117AV	HP007117AV	4
49	Arruela plana série W#10	*	*	*	*	*	4
50	Arruela de nylon #10	GN001210AV	GN001210AV	GN001210AV	GN001210AV	GN001210AV	4

* Item de ferragens padrão, disponível em casas de ferragens